


**M** MIORAH  
YOUR NEEDS. OUR GOAL

By

**A** AINEXA

WWW.MIORAHSHOP.IN

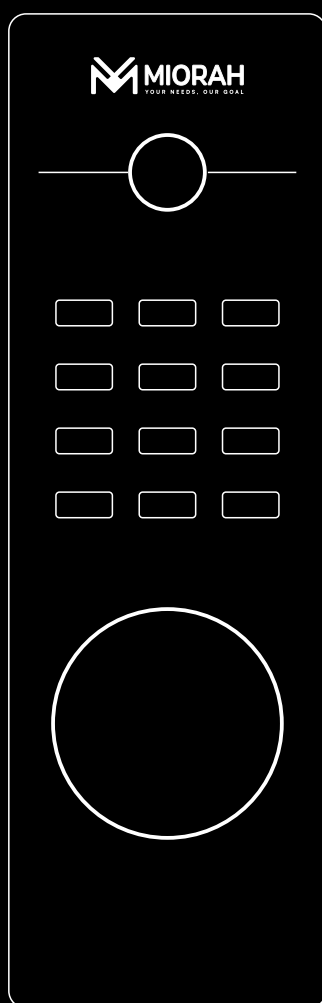

**AINEXA DIGITAL SAFE LOCKER**  
— A6 Password Model —

# A6 PASSWORD MODEL OPERATION GUIDE

- 1. Enter the management mode
- Press the button behind the door then release it, and at the same time the "SET" light is on, then enter the management password (initial management password 123456), and press "#" to end.
- If the management password is correct, enter the system settings.
- If the management password is wrong, it will prompt "verification failed, please re-enter".

## 2. System settings

- Press "1" to set the user password
- 1. Voice prompt "Please enter a new password, and end with "#" key", then enter 1~8 digits password (input any password after 8 digits to cover the 8th digit), press "#" key.
- 2. At this time, the voice prompts "please enter it again, and end with the "#" key, and the "RIGHT" light flashes at the same time, and then enter the password again and press the "#" key.
- 3. If the passwords entered twice are the same, the voice prompt "Setup succeeded" and the new password is set successfully.
- 4. If the two passwords are not the same, the voice prompt "input error, please re-enter".
- Press "4" to set the management password
- 1. The operation method is the same as setting the user password.

## 3. Vibration alarm

- Press the "\*" key to automatically enter the automatic alarm state, and at the same time, the voice prompts "Alert On", when the alarm is entered, the alarm can be released by entering the correct password or fingerprint. When alarming, "ERROR" light will flashes
- When powering on, the system defaults and the vibration alarm is turned off.
- Every time the door is opened, the vibration alarm is turned off and needs to be turned on again.

## 4. Restore factory settings

- Long press the button behind the door for 2~3 seconds, you will hear a "di" sound, and "ERROR" flashes. Release the button and after the flashing is over, the voice prompts "factory restoration successful".
- User password and management password are initialized to "123456", fingerprints are cleared,

## 5. Password to open the door

- Touch the key area, when the backlight is on, press the "#" key, the "RIGHT, ERROR" lights are on, and then enter the password (press the key once, and the "RIGHT" light flashes). After the password is entered, Press the "#" key.
- If the password is correct, you will hear "verification passed" and the "RIGHT" light will light up, and the solenoid will be closed. After the solenoid is closed, the "RIGHT" light will flash, then you can turn the handle to open the door .

- If the password is wrong, you will hear the voice "verification failed". If the error code is three times in a row, "ERROR" flashes and the alarm sounds.

- The "\*" key is used as the delete key. After pressing the "\*" key, the entered password will be cleared.

#### 6. undervoltage

- When the power supply voltage is lower than 5 V ( $\pm 0.2V$ ), the voice prompt "please change the battery " when the system exits after use.

#### PLEASE NOTED:

- · After the battery is powered on, the system will perform a self-check, and at the same time there will be a "di...di...di..." sound prompt. After the self-check is over, the system exits. Due to the difference in battery performance and the unstable power supply of the lock , if the lock is unusable when it is first powered on, please wait patiently for more than ten seconds after the self-test is completed after the first power on.

- · Please do not put the emergency key in the safe, in case the lock cannot be unlocked when the password is forgotten or the battery is undervoltage.

**SCAN THIS QR CODE TO SEE  
THE INSTALLATION VIDEO**



[ccare.hss@gmail.com](mailto:ccare.hss@gmail.com)



+91 8160349035



[www.miorahshop.in](http://www.miorahshop.in)

**FOLLOW US**

