


MMIORAH
YOUR NEEDS. OUR GOAL

By

AAINEXA

WWW.MIORAHSHOP.IN

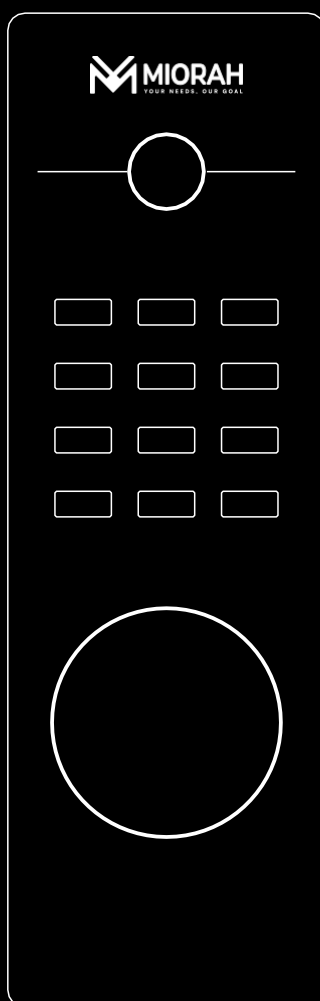

AINEXA DIGITAL SAFE LOCKERA
— S6 Password Model —

S6 PASSWORD MODEL OPERATION GUIDE

I. General Notes

- (1) The safe is in an open state when leaving the factory. Open the safe door, correctly install 4 AA batteries. A "beep" sound indicating power-on confirmation means the circuit is connected and working.
- (2) Each press of a numeric key will make the buzzer beep once, indicating that the key input has been recognized.
- (3) If no subsequent key input is made within 20 seconds after any key is pressed, the safe will enter sleep mode.
- (4) The * and # keys have the same function, both representing confirmation.
- (5) If the entered password is incorrect, the buzzer will beep 5 times. If there are 3 consecutive incorrect attempts, the safe will be locked for 20 seconds and resume normal operation after that. If there are another 3 consecutive incorrect attempts, it will be locked for 5 minutes. After 5 minutes, the keypad will return to normal. When the keypad is locked, the buzzer will beep once per second.

II. Setting and Changing Personal Password

- (1) In the open state, press the setting button inside the door. The buzzer will beep once, and the yellow light will turn on. The personal password can be set or changed.
- (2) Enter your intended personal password (3-8 digits), then press the "#" key to confirm. The buzzer will beep once, and the yellow indicator light will turn off, indicating that the personal password has been set or changed successfully.

For example:

Press the setting key → 1 2 3 4 → #

The yellow indicator light turns off, which means the personal password 1234 has been recognized.

III. Setting and Changing Management Code

- (1) In the open state, first press the 0 0 keys on the keypad. The yellow light will flash twice, then press the setting button inside the door. The yellow light will turn on. The management code can be set or changed.
- (2) Enter your intended new management code (3-8 digits), then press the "#" key to confirm. The buzzer will beep once, and the yellow indicator light will turn off, indicating that the management code has been set or changed successfully.

For example:

Press 0, 0 → setting key → 123456 → #

The yellow indicator light turns off, which means the new management code 123456 has been recognized.

IV. Opening the Door

(1) Enter the correct management code or personal password, then press the "#" key to confirm. The buzzer will beep once, the electromagnet will retract for 6 seconds, and the green indicator light will turn on, allowing you to open the door.

(2) If the password is entered incorrectly, the buzzer will beep 5 times after pressing the "#" key to confirm.

V. Mute Function

(1) Long-press the numeric key 1 for 3 seconds, the green light will stay on briefly, and the buzzer will be muted.

(2) Long-press the numeric key 1 for 3 seconds, the green light will stay on briefly, and the buzzer will beep continuously once, indicating that the buzzer prompt sound is turned on.

VI. Temporary Password

(1) Scan the QR code on WeChat, click "Temporary Password", enter the personal password, then click "Generate Temporary Password". A 10-digit temporary password will be generated.

(2) Enter the generated 10-digit temporary password on the safe panel to open the door.

(3) Each generated temporary password can only be used once.

(4) To use a temporary password next time, please repeat steps 1-3.

VII. Low Voltage Prompt

(1) When opening the safe, if the red indicator light on the panel is on, it indicates low battery voltage. Please replace the batteries with new ones as soon as possible.

**SCAN THIS QR CODE TO SEE
THE INSTALLATION VIDEO**



ccare.hss@gmail.com



+91 8160349035



www.miorahshop.in

FOLLOW US

