


**M** MIORAH  
YOUR NEEDS. OUR GOAL

By

**A** AINEXA

WWW.MIORAHSHOP.IN

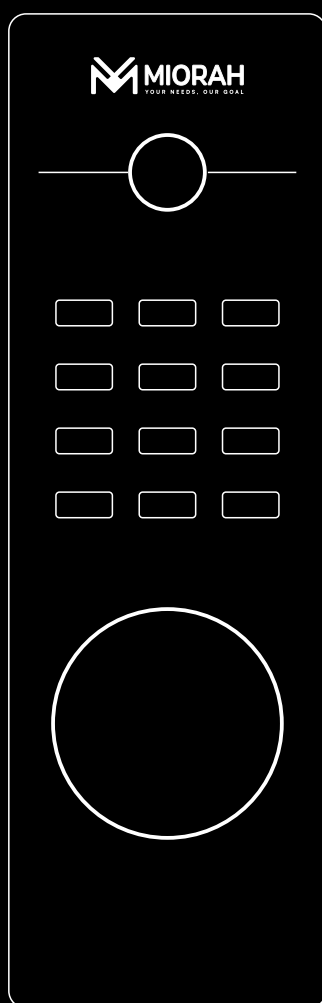

**AINEXA DIGITAL SAFE LOCKER**  
— **S6 Password & Fingerprint Model** —

## **S6 PASSWORD & FINGERPRINT MODEL OPERATION GUIDE**

### **1. Fingerprint Setup**

(1) Press the setup button once. After hearing a short "beep" and the fingerprint scanner lights up, place the finger to be registered centered on the scanner.

(2) After pressing the finger and hearing a short "beep", remove the finger and press again. Repeat this 4 times.

(3) When a long "beep---" is heard, the fingerprint registration is successful. The lock can store up to 30 fingerprints.

### **2. Password Setup**

(1) Press the setup button twice consecutively. After hearing a short "beep" and the numeric keypad lights up, enter a 1-8 digit password (any input beyond 8 digits will overwrite the 8th digit), then press the "#" key.

(2) After hearing a long "beep---" and the "right" light flashes, re-enter the same password and press the "#" key.

(3) If the two passwords are the same, a long "beep---" will sound, indicating the new password is set successfully.

### **3. Door Opening Mode Setup**

(1) Normal opening mode: Touch the keypad area, press "1", then press the setup button. A long "beep, beep---" sound indicates successful setup (unlocks with password or fingerprint).

(2) Safe mode: Touch the keypad area, press "2", then press the setup button. A long "beep, beep---" sound indicates successful setup (unlocks with password + fingerprint).

### **4. Vibration Alarm and Mute Function**

#### **Vibration Alarm**

(1) Touch the keypad area, press the "\*" key. All lights will turn on with a long "beep---beep---beep---" sound, activating the alarm. To deactivate during an alarm, enter the correct password or use a registered fingerprint.

(2) The system defaults to vibration alarm off when powered on.

(3) The vibration alarm turns off after each door opening and needs to be reactivated.

#### **Mute Function**

(4) Long-press the number "1" key for 3 seconds. The "RIGHT" light will stay on briefly, and the buzzer will be muted.

(5) Long-press the number "1" key again for 3 seconds. The "RIGHT" light will stay on briefly with a long buzzer sound, activating the buzzer prompts.

### **5. Restore Factory Settings**

(1) Long-press the button for about 5 seconds (do not release). A long "beep---" sound indicates successful restoration.

(2) The user password will reset to "123456", and all fingerprints will be cleared.

## 6. Unlocking in Normal Mode

### Fingerprint Unlocking

(1) Place the finger on the scanner. A long "beep---" sound means the electromagnet is activated. If recognition fails, a "beep-beep-beep" sound will play. After 6 consecutive failures, an alarm will sound for 1 minute.

### Password Unlocking

(2) In the locked state, touch the screen, enter the password, and press the "#" key to confirm. A long "beep---" sound means the electromagnet is activated. If the password is entered incorrectly 5 times, an alarm will sound for 1 minute.

## 7. Unlocking in Safe Mode

(1) Password first: Enter the password and press the "#" key. After a long "beep---" followed by a short "beep", the fingerprint scanner will light up. Place a registered finger; a long "beep---" sound means the electromagnet is activated.

(2) Fingerprint first: Place a registered finger. After a long "beep---" followed by a short "beep", the backlight will turn on. Enter the correct password and press "#"; a long "beep---" sound means the electromagnet is activated.

## 8. Low Voltage

When the voltage is 4.8V (+/-0.3V) or lower, after unlocking with the correct password or fingerprint, a "beep-beep-beep, beep-beep-beep, beep-beep-beep" prompt will sound, indicating the battery needs replacement for normal operation!

**SCAN THIS QR CODE TO SEE  
THE INSTALLATION VIDEO**



[ccare.hss@gmail.com](mailto:ccare.hss@gmail.com)



+91 8160349035



[www.miorahshop.in](http://www.miorahshop.in)

**FOLLOW US**

